


FM Antenna

- a Attach antenna mount firmly to installation mast.
 - b Run antenna cable through mount and screw it to connector on the bottom of the antenna.
 - c Seat antenna on mount and firmly tighten the 2 hexagon socket screws on the bottom of the antenna to secure it to the mount.
 - d Screw the 3 antenna radiators into the matching screw threads at the bottom of the antenna, and fixate the radiator extensions. Length of radiator must be 93cm in total.
 - e Secure antenna cable to mast.
- Δ For protection against lightning strikes, always connect the mast to ground. Use a 4mm² copper wire (not provided in standard package) and securely clamp it to the bottom of the mast. Use a mast grounding plug of at least 1m length, made from non-corroding steel. Mast grounding plug must be dug at least 0.5m deep into ground.

External Amp
Connect to external Pocket FM power booster only. Booster not included in standard package.

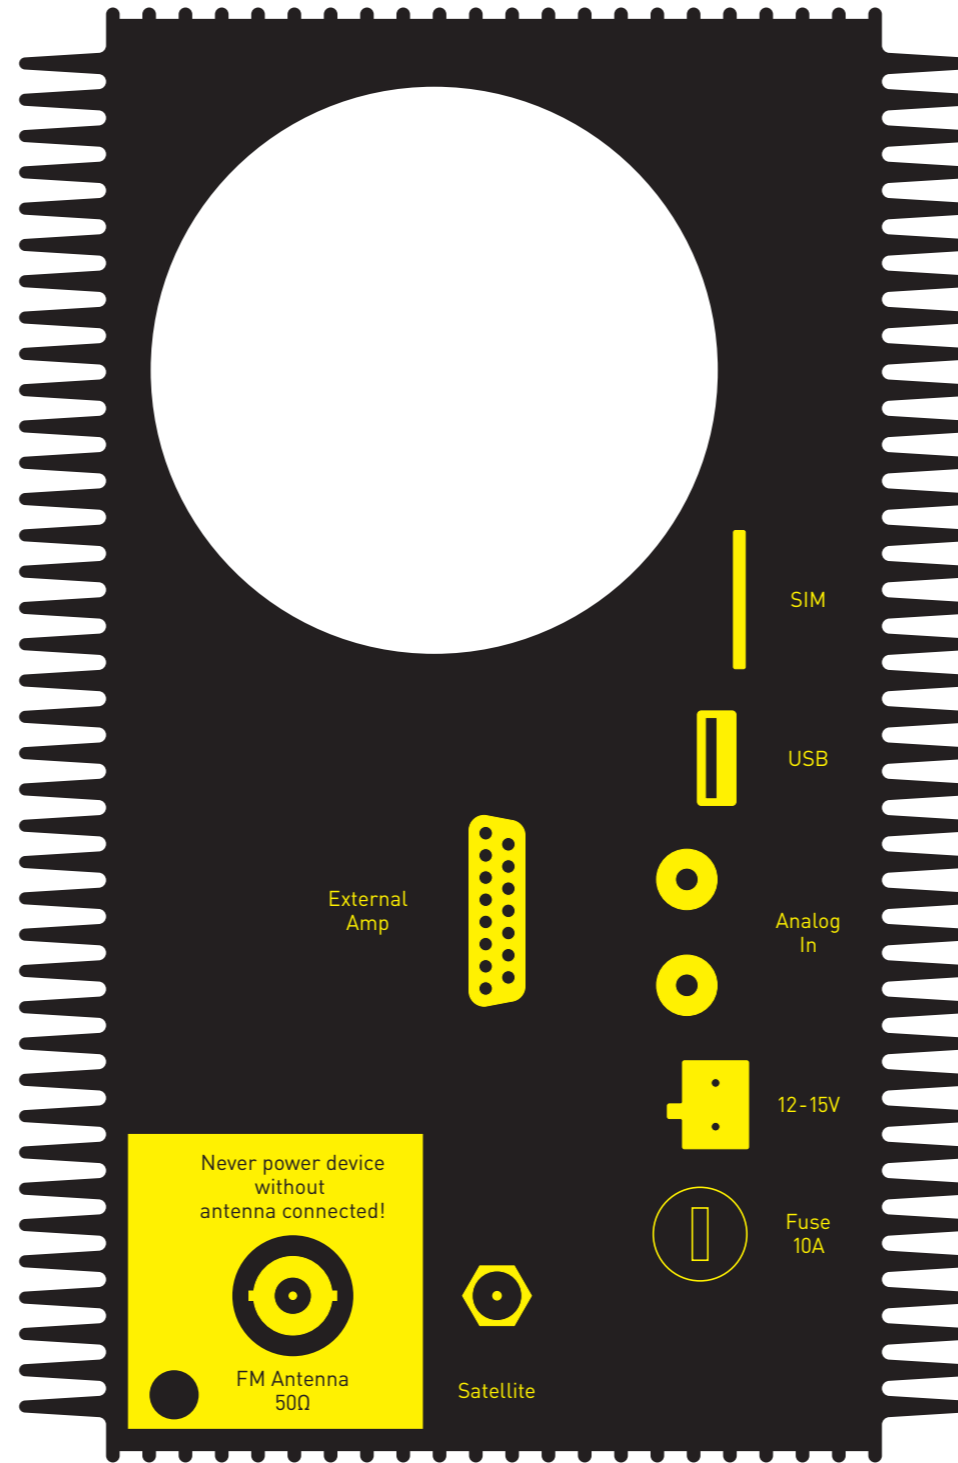

SIM

Always disconnect device from power before inserting/ejecting SIM card. Make sure SIM card is not PIN protected before inserting.



USB

USB stick must be formatted as FAT32. Place audio files in root level of USB stick for playback. The system will not playback audio files placed in subfolders. For a specific playback order, name your files starting with 01..., 02..., 03... (until 99...)



Analog In

Connect a line signal to the analog input. Volume adjustment on the playback device might be necessary. This input does not support microphones.



Power

Connect to the provided power adapter or to any 12-15V DC power source. The approx. maximum current under full load is 4.5A.

Fuse

Use G-fuse, 10A, time-lag, 5x20mm only.

Never power device without antenna connected!
FM Antenna 50Ω

Satellite

Satellite

When installing the satellite antenna dish, check correct alignment with external sat finder/tuner. The Pocket FM only for the set channel, but cannot identify satellites.